 



### HIGH QUALITY PARTS

All movement joints are using high quality bearings with good precision. Parts are strong and easy to install


Note: you received is parts, you should assemble by yourself.

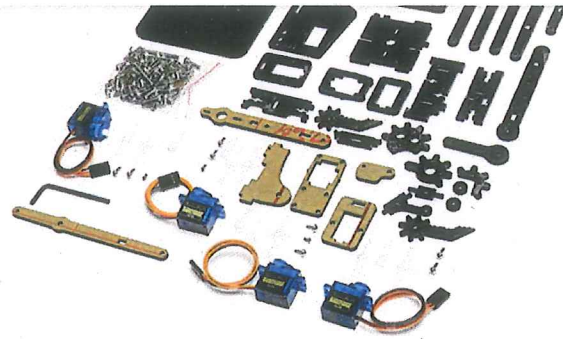

 
### SORT THE PARTS

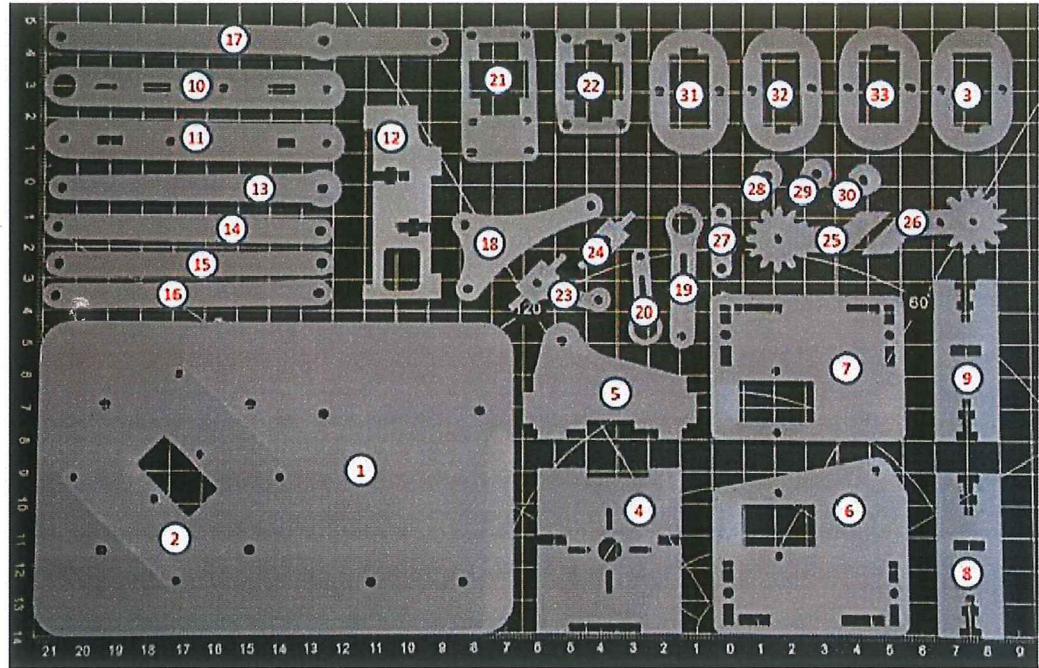



### BASE PLATE INSTALLATION

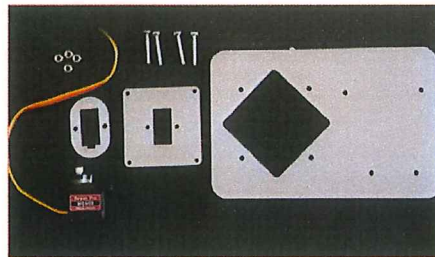


1 Base plate parts

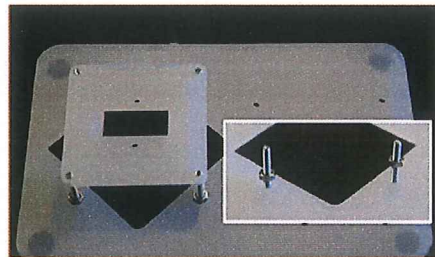

2 Insert the screws into holes and attach the nuts

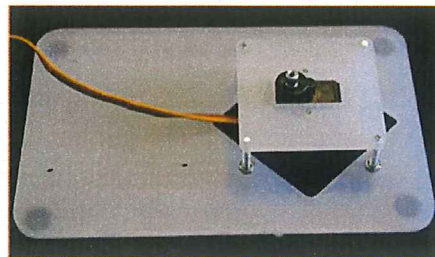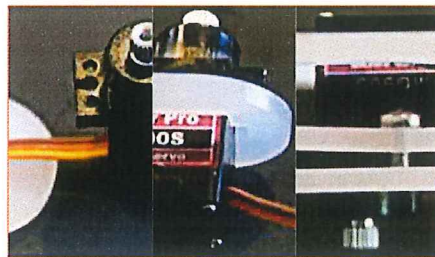

### INSTALL MAIN ARM TO ARM BODY

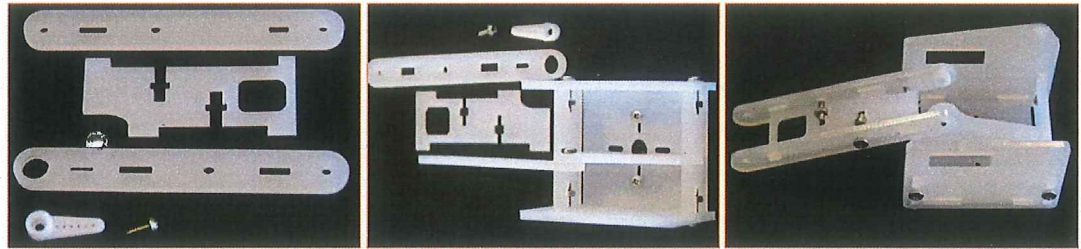


1 main arm parts


2 one side should be connected to arm body first, otherwise the screws would be hard to drive

3 Finally it looks like this


### ASSEMBLE LIFT TO MAIN ARM

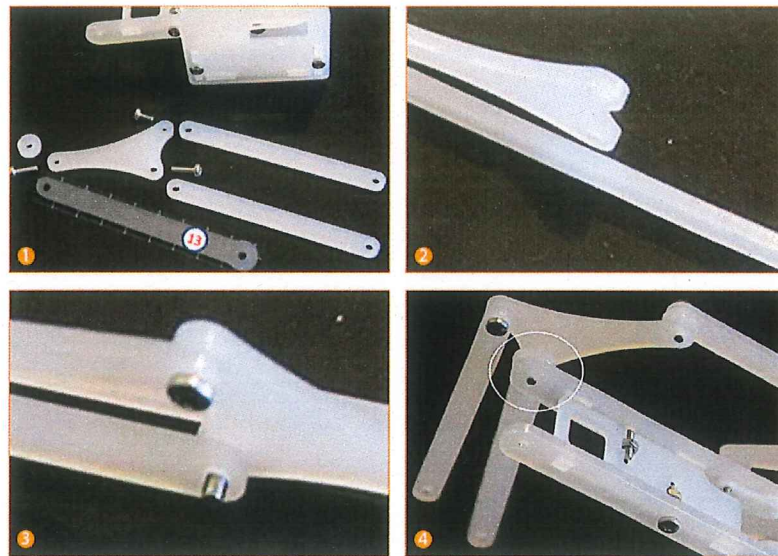

### ASSEMBLE THE LIFT EXTENDER

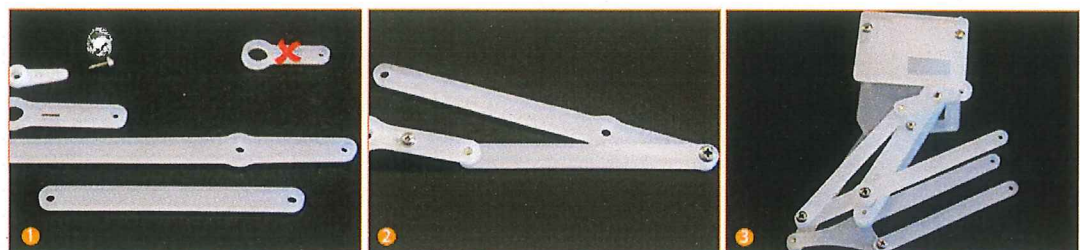

### ASSEMBLE THE LIFT EXTENDER

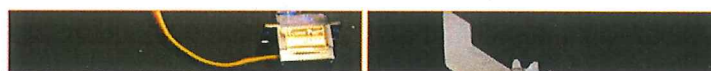

Description


Reviews(93)

FAQ


Shipping & Payment

Wholesale Inquiry


Add to

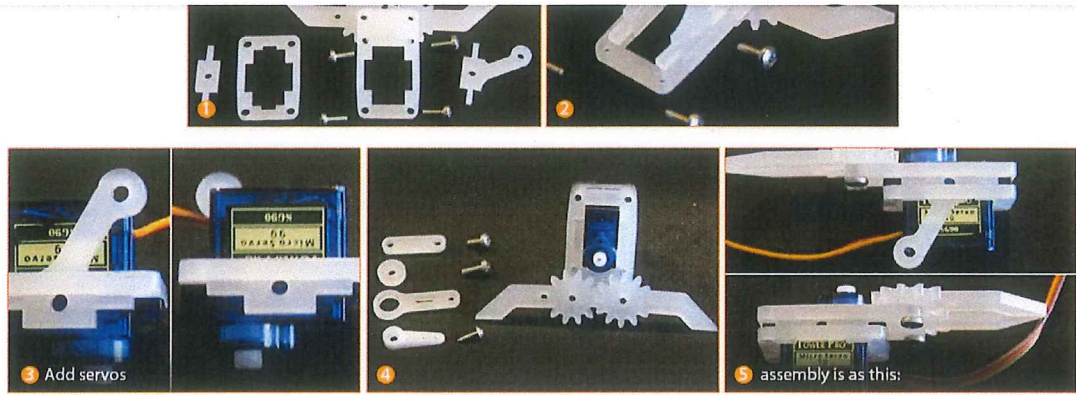

### ADD EXTENDER SERVOS TO LIFTING BODY

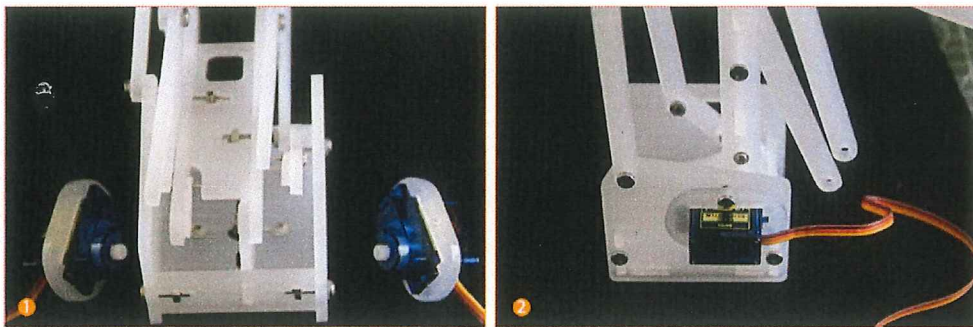

### LAST STEP, ADD GRIPPER TO LIFT

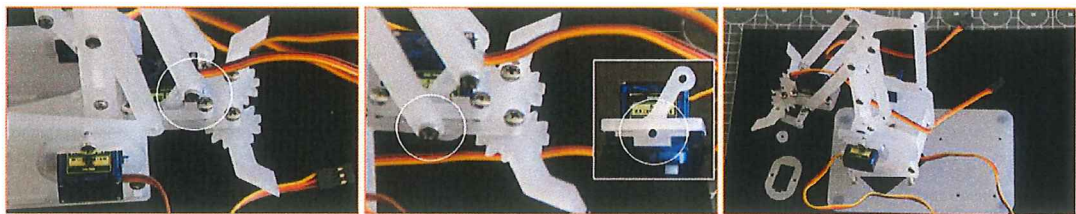

1 It is quite easy if you attach the upper arm to the horn on the right side of the gripper

2 Then, attach the gripper servo to the remaining two arms

3 Finally, it is done!